ดู่มือการใช้งาน

SINGLE PHASE INDUCTION MOTOR THREE PHASE INDUCTION MOTOR

คำแนะนำ

ขอขอบคุณที่เลือกใช้มอเตอร์ของ MEATH เพื่อความปลอดภัยและประโยชน์สูงสุด ในการใช้งาน กรุณาศึกษาคู่มือเล่มนี้โดยละเอียด ควรเก็บรักษาคู่มือเล่มนี้ในสถานที่ ที่ซึ่งสามารถนำคู่มือนี้มาใช้ได้โดยง่าย

ข้อควรปฏิบัติเพื่อความปลอดภัยในการใช_้งาน <u>นิยาม</u>



การใช้งานที่ผิดไปจากระบุนี้อาจทำให้เกิดอันตรายร้ายแรงถึงชีวิต หรือบาดเจ็บสาหัส

\land ข้อควรปฏิบัติ

การใช้งานที่ผิดไปจากระบุนี้ อาจทำให้เกิดอันตรายเล็กน้อยถึง ปานกลาง หรืออาจทำให้เกิดความเสียหายต่อตัวผลิตภัณฑ์เท่านั้น

\land คำเตือน

- 1. ต้องทำการต่อสายดินและเบรกเกอร์ทุกครั้ง เพื่อป้องกันอันตรายจากไฟดูด
- ต้องทำการเสียบปลั๊กหรือการต่อสายดินทุกครั้งที่ใช้งานมอเตอร์
- 3. ต้องทำการถอดปลั๊กหรือตัดวงจรไฟฟ้าทุกครั้ง ก่อนการติดตั้งหรือซ่อมบำรุง
- ต้องปิดฝากล่องวงจรทุกครั้งก่อนการใช้งาน เพราะการเปิดฝากล่องทิ้งไว้ขณะทำงาน อาจทำให้ถูกไฟดูดหรือไฟฟ้าลัดวงจรได้
- 5. ในขณะที่มอเตอร์ทำงาน อย่าสัมผัสมอเตอร์โดยตรง เนื่องจากตัวมอเตอร์จะมีอุณภูมิสูง
- 6. ห้ามติดตั้งมอเตอร์ใกล้วัตถุไวไฟ เพราะอาจเกิดการลุกไหม่ได้
- ขณะมอเตอร์ทำงานห้ามสอดนิ้วมือหรือวัตถุใด ๆเข้าไปในช่องว่างใด ๆ ของตัวมอเตอร์ เพราะอาจทำให้เกิดอันตรายได้
- การติดตั้ง, การขนย้าย, การเดินท่อระบบไฟฟ้า, การซ่อมบำรุง และ การตรวจสอบ จะต้องกระทำโดยผู้ที่ได้ผ่านการอบรมแล้วเท่านั้น

บริษัท มิตซูบิชิ อีเล็คทริค ออโตเมชั่น (ประเทศไทย) จำกัด

\land ข้อควรปฏิบัติ

- 1. ต้องทดสอบเครื่องตัดไฟรั่วเป็นประจำตามระยะเวลาที่ผู้ผลิตกำหนด
- การติดตั้งสายดินต้องมีการตรวจสอบโดยวิศวกรไฟฟ้าที่มีใบอนุญาตรับรองและควร ทดสอบอุปกรณ์และระบบสายดินเป็นประจำ
- ต้องทำการติดตั้งปลั๊กหรือจุดต่อสายไฟให้ห่างจากน้ำ
- 4. ห้ามใช้มอเตอร์ที่ได้รับความเสียหายแล้ว เพราะอาจทำให้ได้รับบาดเจ็บ หรือไฟไหม่ได้
- ห้ามวางสิ่งของรอบ ๆตัวมอเตอร์ ที่ทำให้เกิดการปิดกั้นการระบายอากาศ ซึ่งเป็นสาเหตุ ทำให้อุณหภูมิมอเตอร์สูงผิดปกติ อาจเกิดการลุกไหม้ได้
- เมื่อทำการทดสอบมอเตอร์ตัวเปล่า ให้ถอดสลัก (Key) ออกก่อนทุกครั้ง
- ตรวจสอบทิศทางการหมุนของมอเตอร์ให้ถูกต้อง ก่อนติดตั้งเข้ากับเครื่องจักร
- 8. ท้ามสัมผัสร่องสลัก "Key way" ด้วยมือเปล่า
- ต่อสายไฟฟ้าที่มอเตอร์ให้ถูกต้องตามรูปแบบวงจรภายในกล่องวงจร หรือสัญลักษณ์ ของสายไฟภายในตัวมอเตอร์
- 10. หยุดการปฏิบัติงานโดยทันที ถ[้]ามีความผิดปกติเกิดขึ้น
- 11. การซ่อม, ถอดประกอบ และการดัดแปลง ต้องกระทำโดยผู้ชำนาญ
- การดัดแปลงสินค้าโดยผู้ที่ไม่ได้รับการรับรองจาก MEATH นั้น MEATH จะไม่รับผิดชอบ ต่อการกระทำดังกล่าว

1. การตรวจรับสินค้า

- 1.1 ตรวจสอบว่ารายละเอียดที่ป้ายระบุสินค้าตรงกับที่สั่งไว้หรือไม่
- 1.2 ทดสอบการหมุนของมอเตอร์ว่าสามารถหมุนได้คล่องด้วยมือ
- 1.3 ตรวจสอบสภาพทั่วไปของมอเตอร์ว่ามีความเสียหายจากการขนส่งหรือไม่

2. การติดตั้ง

- 2.1 ติดตั้งมอเตอร์ในที่ที่มีการระบายอากาศได้ดี สะอาดและแห้ง เว้นระยะรอบ ตัวมอเตอร์เพื่อการระบายอากาศ (โดยปกติอย่างน้อย 20 ซม.)
- 2.2 ยึดมอเตอร์กับฐานที่มั่นคงแข็งแรง
- 2.3 มอเตอร์รุ่นหน้าแปลนจะไม่มีระบบป้องกันน้ำเข้าด้านฝั่งหน้าแปลน (ปกติหน้าแปลนจะถูกติดตั้งแบบประกบเข้ากับเครื่องจักร)



ภาพที่ 1: ลักษณะการติดตั้งที่เหมาะสมสำหรับมอเตอร์รุ่นแนวนอนและรุ่นหน้าแปลน หมายเหตุ: – ถ้าต้องการติดตั้งนอกเหนือจากลักษณะภาพที่ 1 กรุณาติดต่อ

- ตัวแทนจำหน่าย หรือ ทางผู้ผลิต(MEATH) โดยตรง
- มอเตอร์รุ่นหน้าแปลนที่ติดตั้งแนวนอน (รูปที่(3)) เหมาะสำหรับ ใช้งานในที่รุ่มและภายในอาคาร

3. การต่อเชื่อมกับเครื่องจักร

3.1 การประกอบอุปกรณ์เชื่อมต่อเครื่องจักร (คัปปลิ้ง, มู่เล่, ฯลฯ)

ในการติดตั้ง ต[้]องระวังอย่าให้มีการกระทบกระเทือนรุน^{ี้}แรง เพราะอาจทำให้ ตลับลูกปืนเสียหายได้ ควรเลือกขนาดรูกลางที่เหมาะสม เวลาประกอบต้อง ให้แนวแกนของอุปกรณ์เชื่อมต่อเครื่องจักร กับแนวแกนเพลามอเตอร์ตรงเป็น แนวเดียวกันมากที่สุด

3.2 ต่อเชื่อมด้วยคัปปลิ้ง

ติดตั้งมอเตอร์ให้ศูนย์กลางของเพลามอเตอร์และเพลาเครื่องจักรตรงกัน ไม่เอียงทำมุมกัน และไม่เยื้องศูนย์กัน คลาดเคลื่อนไม่เกิน 0.03 มม.





- 3.3 การส่งกำลังด้วยสายพาน
 - (1) ติดตั้งมอเตอร์และเครื่องจักร ให้เพลาขนานกัน และให้ร่องสายพานอยู่ใน แนวระนาบเดียวกัน โดยความคลาดเคลื่อนเชิงมุมน้อยกว่า 1/3^o และ การเยื้องของระนาบร่องสายพานควรเป็นดังนี้
 - ระยะระหว่างเพลาไม่เกิน 1 เมตร ความเยื้อง (L) ต่ำกว่า 1 มม.
 - ระยะระหว่างเพลาเกิน 1 เมตร อัตราการเยื้อง (L:C) ต่ำกว่า 1:1000

3



ภาพที่ 3: การตั้งศูนย์ของล[้]อสายพาน

(2) ติดตั้งระบบขับสายพานให้ส่วนล่างของสายพานเป็นด้านตึงเสมอ



ภาพที่ 4: ด้านหย่อนและด้านตึงของสายพาน

- 4. การต่อสายไฟ
 - 4.1 ผังการต่อสายไฟมอเตอร์รุ่นต่างๆ

– 1 เฟส







- 3 เฟส รุ่น SF, SB แบบมี Terminal Block





- 4.3 เลือกใช้ขนาดสายนำไฟฟ้าให้เหมาะสมกับปริมาณกระแสไฟใช้งาน ไม่เล็ก จนเกินไป เพราะอาจทำให้สายไฟเกิดความร้อนสูง และเกิดอันตรายชิ้นได้
- 4.4 หลีกเลี่ยงการใช้สายนำไฟฟ้าที่มีความยาวมากๆ เพราะจะทำให้แรงดันไฟฟ้า ต่ำ ซึ่งอาจเป็นผลให้มอเตอร์ไม่ทำงาน เกิดอันตรายจากความร้อนภายใน สายไฟและทำให้ชิ้นส่วนภายในมอเตอร์เสียหายได้
- 4.5 ต่อสายนำไฟฟ้าและวงจรมอเตอร์ตามแผนผังการต่อวงจรที่ติดอยู่ที่ฝากล่อง วงจรหรือที่ป้ายระบุสินค้า ให้ตรงกับค่าแรงดันไฟฟ้าที่เลือกใช้
- 4.6 ต่อสายดินตามตำแหน่งสกรูต่อสายดินภายในกล่องวงจร หรือที่ฐานมอเตอร์ ซึ่งมีสัญลักษณ์ดังนี้ (÷)

🕂 ข้อควรปฏิบัติ: เมื่อต่อสายไฟเข้า หรือสลับสายไฟเพื่อกลับทิศทางการหมุนหรือ การปรับเปลี่ยนรูปแบบ Connection bar ต้องมั่นใจว่าได้ขันสกรู ให้แน่นแล้วทุกตัว



- 3 เฟส รุ่น SF, SB แบบ Lead Wire



หมายเหตุ: * อ้างอิงค่าใน Name plate

4.2 การต่อสายไฟ ตามข้อ 4.1 มอเตอร์ จะหมุนในทิศทวนเข็มนาฬิกาเมื่อมองจาก ด้านเพลาขับ หากต้องการให้หมุนในทิศตามเข็มนาฬิกา สามารถทำได้ดังนี้ มอเตอร์ 1 เฟส (ยกเว้นรุ่น SI) รุ่น SP, SC : สลับดำแหน่งสายไฟมอเตอร์เส้นสีฟ้าและดำ รุน SCL : สลับการต่อสายไฟ จาก U1-Z1, U2-Z2 เป็น U1-Z2, U2-Z1

มอเตอร์ 3 เฟส

- สลับสายของแหล่งจ่ายไฟ (R, S, T) เพียง 1 คู่
- 6
- 4.7 มอเตอร์นี้ไม่มีอุปกรณ์ป้องกัน จึงควรติดตั้งอุปกรณ์ป้องกันอื่น ๆ ควบคู่ ไปด้วยเพื่อความปลอดภัย เช่น เบรกเกอร์หรือฟิวส์ เป็นต้น

หมายเหตุ: ดูค่าทางไฟฟ้า และกระแสไฟใช้งานสูงสุด ได้จากป้ายระบุสินค้า

5. การใช้งาน

5.1 การใช้งานครั้งแรก

- (1) เพลามอเตอร์ต้องสามารถหมุนได้ด้วยมือ โดยไม่ติดขัด
- (2) ตรวจเช็คว่ามีการติดตั้งฟิวส์ขนาดเหมาะสมไว้แล้ว
- (3) ตรวจสอบให้แน่ใจว่าได้ต่อสายไฟและสายดินแล้ว
- (4) ตรวจสอบทิศทางการหมุนของมอเตอร์ให้ตรงกับเครื่องจักรที่ใช้
- (5) ตรวจเซ็คว่าการเชื่อมต่อกับเครื่องจักรแน่นหนาและแข็งแรงเพียงพอ

5.2 การใช้งานทั่วไป

- สุดโหลดในขณะทำการสตาร์ทให้น้อยที่สุด แล้วค่อยเพิ่มโหลดเมื่อมอเตอร์ ถึงความเร็วสูงสุด
- (2) ตรวจวัดกระแสในขณะทำงานว่าเกินกว่าที่ระบุไว้ในป้ายระบุสินค้าหรือไม่ หากเกินให้ปรับลดโหลดลง มีฉะนั้นอาจทำให้ขดลวดมอเตอร์ไหม่ได้
- (3) ตรวจสอบว่าไม่มีเสียงดังผิดปกติ ในตลับลูกปืน
- (4) หากเกิดไฟดับ ให้ทำการสับสวิทช์ตัดไฟ เพื่อป้องกันมอเตอร์โอเวอร์โหลด หรืออันตรายอื่นๆ เนื่องจากมอเตอร์รับโหลดกะทันหันเมื่อไฟมา
- (5) หยุดมอเตอร์ทันที่หากเกิดความผิดปกติขึ้น

คำเตือน: มอเตอร์อาจเกิดความเสียหายได้หากระยะเวลาในการสตาร์ท นานเกินไป หรือทำการสตาร์ทอย่างต่อเนื่องหลายครั้งติดต่อกัน

ภาพที่ 5: ตำแหน่งของสกรูต่อสายดิน

กล่องวงจรรุ่น MET

6. การตรวจสอบและซ่อมบำรุง

- 6.1 ระยะเวลาการตรวจสอบและซ่อมบำรุง
 - (1) มอเตอร์ที่มีการใช้งานน้อยจะมีความชื้นเนื่องจากหยุดเป็นเวลานาน การตรวจสอบประจำวันจึงมีความสำคัญ ในทางกลับกันการถอดชิ้นส่วน ตรวจสอบนั้นไม่จำเป็นต้องทำบ่อยครั้ง
 - (2) มอเตอร์ที่ใช้งานต่อเนื่อง เช่น ปั้มและพัดลม ควรหมั่นทำการถอดชิ้นส่วน ตรวจสอบ
 - (3) ทำการบันทึกผลการตรวจสอบประจำวัน, การตรวจสอบประจำเดือนและ การถอดชิ้นส่วนตรวจสอบ เพื่ออ้างอิงและวางแผนการซ่อมบำรุงในอนาคต
 - (4) จัดแผนและทำการถอดชิ้นส่วนตรวจสอบตามการใช้งาน (ดู **ตารางที่ 1**)

ตารางที่ 1: ระยะเวลาการถอดชิ้นส่วนตรวจสอบ ตามสภาวะการใช้งานต่างๆ

สถานที่ติดตั้ง	ใช้งานน้อย	ใซ้งานต่อเนื่อง
ในบริเวณที่มีฝุ่นมาก	ทุกๆ 1-2 ปี	ทุกปี
ในบริเวณที่สะอาด	ทุกๆ 2-3 ปี	ทุกๆ 1-3 ปี

6.2 การตรวจสอบประจำวัน

- (1) เสียง ใช้ก้านพังเสียง พังส่วนต่าง ๆของมอเตอร์ ว่ามีเสียงผิดปกติหรือไม่
- (2) กลิ่น ตรวจสอบว่ามีกลิ่นไหม้ เนื่องจากการใช้งานเกินกำลัง หรือจากการ ระบายอากาศที่ไม่ดีหรือไม่
- (3) ภายนอก ตรวจสอบว่ามีสิ่งแปลกปลอมปิดกั้นการระบายอากาศ หรือ สภาพภายนอกของมอเตอร์มีความผิดปกติอื่นๆ หรือไม่

6.3 การตรวจสอบประจำเดือน

- (1) วัดความต้านทานของฉนวนด้วยเครื่องวัดเมกกะโอห์ม ว่าต้องมีค่ามากกว่า
 1MΩ โดยวัดแต่ละปลายสายไฟหรือขั้วต่อไฟของมอเตอร์เทียบกับสายดิน
- (2) ทำการซ่อมแซมสีที่หลุดล่อนเพื่อป้องกันสนิม

9

7.2 การถอดประกอบขึ้นส่วนป้องกัน สำหรับรุ่น IP55 (Outdoor)

- (1) END COVER
 - (1.1) แบบสวม (ไม่มีสกรูยึด)
 - การถอด : ใช้ไขควงปากแบนดันขอบด้านหลังของ End Cover ให้หลุด ออกจาก Bracket ระวังอย่างัดขอบ End Cover จนเสียรูป การประกอบ : ให้ทากาวยางกันน้ำ ที่จุดประกบ Bracket แล้วสวม End Cover เข้ากับ Bracket จนสุด โดยให้ช่อง ระบายน้ำอยู่ด้านล่าง (สังเกตที่ร่องบากหรือส่วนนูน)





ตำแหน่งซ่องระบายน้ำ

End Cover แบบสวม

ภาพที่ 7: End Cover แบบสวม

(1.2) แบบมีสกรูยึด

การถอด : คลายสกรูยึดและนำ End Cover ออก การประกอบ : ขันสกรูยึด End Cover เข้ากับ Bracket (ไม่มีช่อง ระบายน้ำที่ End Cover)



ภาพที่ 8: End Cover แบบยึดสกรู

6.4 การถอดชิ้นส่วนตรวจสอบ

- (1) ทำความสะอาดตลับลูกปืนและเบ้า
- (2) ตรวจสอบขดลวดว่าเชือกรัดยังแน่นหรือไม่ และทำความสะอาดขดลวด หากมีฝุ่นหรือสิ่งสกปรก
- (3) ตรวจสอบ ซ่อมแซมหรือเปลี่ยนขึ้นส่วนที่เสียหาย และทำความสะอาด ชิ้นส่วนที่สกปรก

7. ข้อแนะนำในการถอดประกอบชิ้นส่วน

7.1 ชิ้นส่วนมอเตอร์



(2) FRINGER

การถอด : Fringer เป็นแหวนยางรัดอยู่ที่เพลา ให้ดันออกตามแนวแกน เพลา

การประกอบ : ทาจารบีที่ผิว Bracket พอประมาณ สวม Fringer เข้ากับเพลา โดยทันด้านนูนออกจาก Bracket ขอบ Fringer จะเอียงเข้า หา Bracket ตามรูป ดัน Fringer จนได้ระยะตามที่กำหนด ระวังอย่าให้ Fringer ถูก Bracket เบียดจนเอียงมาอีกด้านหนึ่ง



ภาพที่ 9: การประกอบ Fringer และระยะประกอบ

(3) V-RING

การถอด : V-ring เป็นแหวนยางรัดอยู่ที่เพลา ให้ดันออกตามแนวแกน เพลา

การประกอบ : ทาจารบีที่ผิว Bracket พอประมาณ สวม V-ring เข้ากับ เพลาโดยให้ด้านบางชน Bracket ให้ได้ระยะตามรูป



ตารางที่ 2: ระยะประกอบ V-ring
Ød A

Ød	A
10~18	4.5 ± 0.6
20~38	6 ± 0.8
40 ~65	7 ± 1
· · · · ·	

ภาพที่ 10: การประกอบ V-ring

หน่วย : มม.

คำเตือน: ต้องควบคุมระยะการสวม Fringer และ V-ring ให้ได้ตามค่าที่ กำหนดในตารางที่ 2 ,หากไม่แน่ใจกรุณาติดต่อตัวศูนย์บริการ Tel. 0-2906-3337~8

7.3 การถอดประกอบ BRACKET

(1) การถอด Bracket

คลายสกรูยึด และใช้ค้อนยางตอก Bracket ออกจากตัว Frame ในรุ่น IP55 (Outdoor) ซึ่งมีกาวกันน้ำ หาก Bracket ถูกยึดติดแน่น ให้ใช้ ค้อนยางตอกหูยึดสกรูเบาๆ ในทิศทางตามแนวเส้นรอบวง ((1)) เพื่อให้ Bracket คลายตัวก่อน (บางรุ่นจะมีเฉพาะหูยึด Fan Cover ที่ Bracket ้ด้านตรงข้ามเพลาขับเท่านั้น ให้ตอกที่หูยึดนี้แทน) แล้วจึงตอก Bracket ออก ((2)) ด้วยความระมัดระวัง







ภาพที่ 11: การถอด Bracket



🖄 คำเตือน: อย่าตอกปลายเพลาเพื่อกระทุ้ง Bracket ด้านตรงข้ามออก เพราะจะทำให้ลูกปืนเสียหาย

13

7.5 การถอดประกอบตลับลูกปืนกับเพลามอเตอร์

(1) การถอดตลับลูกปืนออกจากเพลา

รองรับวงแหวนในของตลับลูกปืนด้วยแผ่นฐานรองรับ แล้วดันปลายเพลา ้ด้วยเครื่องกดอย่างซ้า ๆ หากใช้เครื่องมือถอด (Bearing Puller) จัดให้ขาดัน รองอยู่ที่วงแหวนในของตลับลูกปืน แล้วหมุนโบลท์เพื่อดันปลายเพลาออก





ใช้เครื่องมือถอด (bearing puller)

ภาพที่ 13: การถอดตลับลูกปืนออกจากเพลา โดยใช่เครื่องกด และเครื่องมือถอด

(2) การประกอบตลับลูกปืนเข้ากับเพลา

ใช้เครื่องกด

ทาน้ำมันที่เพลาและตลับลูกปืนบริเวณผิวที่จะสวม วางท่อหรือเครื่องมือ ้อื่นๆ บนวงแหวนในของลูกปืน ดันลูกปืนลงอย่างซ้าๆ โดยใช้เครื่องกด



ภาพที่ 14: การประกอบตลับลูกปืนกลับเข[้]าเพลา โดยใช้เครื่องกด

้คำเตือน: การถอดชิ้นส่วนมอเตอร์ ต้องทำด้วยความระมัดระวังอย่างสูง หากไม่แน่ใจกรุณาติดต่อตัวแทนจำหน่ายใกล้บ้านท่าน หรือติดต่อศูนย์บริการ โทร. 0-2906-3337~8 15

(2) การประกอบ Bracket

้ก่อนการประกอบ Bracket ให้น้ำ Rotor ที่ประกอบตลับลูกปืนแล้ว สอดไว้ในรูกลางของ Stator ระวังอย่าให้ผิว Rotor ถูกขีดข่วน ประกอบ Bracket ทีละด้าน โดยสวมเบ้าตรงกลางเข้ากับตลับลูกปืน แล้วใช้ ค้อนยางตอกให้ Bracket ประกบเข้ากับ Frame แล้วจึงยึดสกรู

สำหรับรุ่น IP55 (Outdoor) ให้นำคราบกาวเก่าที่ขอบ Frame และ Bracket ออกก่อน จากนั้นทากาว THREE BOND 1194 ที่ขอบ Frame โดยรอบ แล้วจึงประกอบ Bracket โดยให้ช่องระบายน้ำอยู่ด้านล่างตามรูป (บางรุ่นที่ต้องร้อยสกรูผ่านภายใน Frame ให้ทากาวรอบรูยึดสกรูของ Bracket ด้วย)

> ส่วนนูนของ Shaft Bracket

ช่องระบายน้ำ (ร่อง) ภาพที่ 12: การประกอบ Bracket สำหรับรุ่น IP55

7.4 การถอดประกอบ Capacitor Cover (เฉพาะบางรุ่น)

- (1) ถอดโดย คลายสกรูที่ยึดฝาครอบออก แล้วยกฝาครอบออกในแนวตรง
- (2) ประกอบโดย ใส่ฝาครอบกลับในลักษณะเดิม แล้วยึดสกรูกลับตำแหน่งเดิม สำหรับรุ่น IP55 (Outdoor) ให้ทำความสะอาดคราบกาวเก่า ก่อนทากาวยาง กันน้ำที่ฝาครอบ บริเวณจุดประกบยาง ให้ทั่วเสมอกัน
 - แล้วให้หยอดกาวกันน้ำลงในรูสกรู ก่อนยึดสกรูเพื่อประกอบฝาครอบ



🎊 คำเตือน: การถอดประกอบ Capacitor cover นั้น อาจทำให_้มอเตอร์สูญเสียประสิทธิ ภาพการป้องกันน้ำและฝุ่น(สำหรับรุ่น IP55)และเสียหายได้ หากไม่แน่ใจกรุณาติดต่อศูนย์บริการ โทร. 0-2906-3337~8 14

8. การแก้ไขปัญหา

ตารางที่ 3: บัญหาและการแก้ไขเบื้องต[ั]น

อาการผิดปกติ	สาเหตุที่เป็นไปได้	การแก้ไข
มอเตอร์ ไม่ทำงาน	 1. ไม่มีกระแสไฟฟ้า 2. พิวส์ขาด 3. สายไฟขาด/แตก 4. จุดเชื่อมต่อแหล่งจ่ายไฟไม่ดี 5. แรงดันไฟฟ้า (Voltage) ต่ำ 	 1. ตรวจสอบระบบไฟฟ้า 2. เปลี่ยนพิวส์ 3. เปลี่ยนสายไฟ 4. ทำความสะอาดจุดเชื่อมต่อ/ขันยึดให้แน่น 5. ตรวจสอบระบบไฟฟ้าหรือเปลี่ยนขนาด หรือความยาวสายไฟฟ้า
มอเตอร์ มีเสียงดัง ผิดปกติ	 ต่อไฟขาดไป 1 เฟส (สำหรับมอเตอร์ 3 เฟส) แหล่งจ่ายไฟผิดปกติ ใช้งานเกินพิกัด ลูกปืนเสีย 	 ตรวจสอบสวิทช์และวงจรควบคุม ตรวจสอบแก้ไขแหล่งจ่ายไฟ เลือกใช้มอเตอร์ที่มีกำลังเหมาะสม เปลี่ยนตลับลูกปืนใหม่
มอเตอร์ หมุนซ้า	1. ระบบช่วยสตาร์ทผิดปกติ 2. แหล่งจ่ายไฟผิดปกติ 3. ใช้งานเกินพิกัด	1. ตรวจสอบและซ่อมแซมระบบช่วยสตาร์ท 2. ตรวจสอบแก้ไขแหล่งจ่ายไฟ 3. เลือกใช้มอเตอร์ที่มีกำลังเหมาะสม
มีการ สั่นสะเทือน สูงผิดปกติ	 เครื่องจักรที่นำมาประกอบ มีความไม่สมดุลมากเกิน การประกอบคัปปลิ้งไม่ได้ศูนย์ ฐานยึดมอเตอร์ไม่มั่นคง หรือโบลท์ยึดหลวม 	 ตรวจสอบแก้ไขค่าความสมดุลของ ขึ้นส่วนเครื่องจักรที่นำมาประกอบ ปรับตั้งความเยื้องศูนย์ให้ถูกต้อง (พิจารณาการขยายตัวจากความร้อนด้วย) เสริมความแข็งแรงให้ฐาน หรือชันโบลท์ ให้แน่น

ทางบริษัทขอสงวนสิทธิ์ ในการปรับปรุงคุณลักษณะ สมรรถนะ หรือรูปแบบบางประการ โดยไม่ต้องแจ้งให้ทราบล่วงหน้า

INSTRUCTION MANUAL

SINGLE PHASE INDUCTION MOTOR THREE PHASE INDUCTION MOTOR

INTRODUCTION

Thank you for choosing MEATH's motor . For safety and maximum benefits of this equipment, please carefully read this INSTRUCTION MANUAL before use. After reading, always store this manual where it can be accessed easily.

IMPORTANT SAFETY INSTRUCTION

DEFINITIONS



Assumes that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Assumes that incorrect handling may cause hazardous conditions, resulting in medium or slight injury or may cause physical damage only.

- Ground and circuit breaker are strongly required to prevent short circuit and harmful electric leakage.
- 2. Must be grounded each time before operate the motor
- 3. Must be unplugged or interrupted circuit each time before installation or maintenance.
- Always close terminal box cover before operate the motor. Operation with terminal box opened may lead to electric shock or shot circuit.
- Do not touch motor body directly while motor is operating. Generated heat of motor may cause injurious pain.
- 6. Do not install motor near to inflammable surrounding. It may cause harmful burn out.
- Do not insert finger or anything into any chamber of motor while motor is operating. It may cause serious personal injury.
- Only trained persons must perform transportation, installation, piping and wiring, operation, maintenance and inspection.

MITSUBISHI ELECTRIC AUTOMATION (THAILAND) CO., LTD. MEATH-M-0916-M2

3. COUPLING WITH MACHINE

- 3.1 MACHINE COUPLING EQUIPMENT ASSEMBLY (COUPING, PULLEY, ETC.) In installation, be careful not to have an forceful impact because of it
 - can cause damage to bearing. Select proper center hole. In assembly, align axis of machine coupling equipment with motor shaft to be coaxial as much as posible.

3.2 DIRECT COUPLING

Align motor shaft center to machine shaft center to be concentric and coaxial both torelance are not over 0.03 mm





З

Figure 1: Coupling alignment

3.3 BELT DRIVE

(1) Align motor and machine shafts to be parallel and belt grooves are at the same plane by angular torelance is less than 1/3^o and offset of belt groove is

- Shaft-to-shaft distance not over 1m, offset (L) is under 1mm
- Shaft-to-shaft distance 1m up, offset ratio (L:C) is under 1:1000



Figure 2: Pulley alignment

(2) Always install belt system lower side to be the tense side.



Figure 3: Slack and tense side of belt

\triangle caution

- Earth leakage breaker must always be tested follow to period that is recommended by manufacturer.
- Ground system installation must be done by investigation from electrical engineer who have license. All system and equipment should also be checked often.
- 3. Plug or cable connect point must be installed far from water.
- Do not use a damaged motor. Failure to observe this could lead to injuries or fires, etc.
- Do not place objects around the motor that will block the ventilation. It causes of abnormal motor overheating and may cause harmful burn out.
- When running the motor as a single unit, always remove the key installed on the spindle.
- 7. Confirm the corrected rotation direction before connecting the motor to a machine.
- 8. Do not touch the motor shaft end keyway with bare hands.
- Wire the motor according to connection diagram in the circuit box or interior wiring code.
- 10. Stop operation immediately if an abnormality occurs.
- 11. All repairs, disassembly and modification must be done by a specialist.
- Modifications of the product by the user are not covered by the MEATH warranty. Thus, MEATH will not bear any responsibility.

1. ACCEPTANCE INSPECTION

- 1.1 Make sure that specifications on motor nameplate is as ordered
- 1.2 Motor should be rotated lightly by hand without any catching.
- 1.3 Confirm that there are not any damage occurred during shipment.

2. INSTALLATION

- 2.1 Install motor at good-ventilation, clean and dry place. Keep space around motor for ventilation (normally, at least 20 cm).
- 2.2 Fasten motor onto steady base

4. WIRING

- 4.1 CONNECTION DIAGRAM OF MOTORS
 - 1 PHASE



- 3 PHASE MET-T MODEL









- 4.3 Use appropriate cable wire size to matches operating current, especially, not too small. Improper cable size may causes harmful cable burn out.
- 4.4 Avoid using very long power cable. It can causes voltage drops and may leads to motor starting failure, cable burn out or damages to motor part.
- 4.5 Connect the power cable and motor circuit follow by connection diagram attached in terminal box cover or printed in nameplate to match with power source voltage.
- 4.6 Tighten ground wire with ground screw in terminal box or motor base Where imprinted with this (=) sign.



Figure 4: Ground screw position

- 4.7 This motor does not have a protection device. Additional protection device such as breaker or fuse is required for safety.
- **REMARK:** See necessary electrical values and maximum operating current on attached nameplate.

- 3 PHASE SF, SB MODEL WITH LEAD WIRE





- 4.2 Wiring as described in Item 4.1 will drive motor in counter-clockwise as viewed from drive side. Clockwise rotation can be done as follow.
 - 1 Phase Motor (Except SI model)
 - SP, SC model : Swap motor wire between blue and black
 - SCL model : Swap wiring from U1-Z1, U2 -Z2 to U1-Z2, U2-Z1 **3 Phase Motor**

Phase Mot

Swap any pair of power source (R, S, T)

5. OPERATION

5

5.1 INITIAL OPERATION

- (1) Motor shaft should be rotated lightly by hand without catching.
- (2) Inspect that proper size fuse is installed.
- (3) Make sure that power cable and ground are connected already.
- (4) Check that rotational direction of machine and motor are matched.
- (5) Inspect that coupling with machine is reliable and strong enough.

5.2 GENERAL OPERATION

- Reduce load as less as possible on starting and release back when motor reaches to maximum speed.
- (2) Check that operating current is as specified on nameplate or not. In case of over current, reduce motor load to protect motor from burn.
- (3) Inspect that there is no abnormal noise in bearing.
- (4) If the power failure occurred, turn power switch off to protect motor from overload condition or other danger occurred by immediate load after power back.
- (5) Immediately stop motor, in case of abnormality occurred.

WARNING: Motor will be damaged if starting interval time is too long or frequently continuous start.

6. INSPECTION AND MAINTENANCE

- 6.1 INSPECTION AND MAINTENANCE SCHEDULE
 - (1) For rarely used motor, daily inspection is necessary from humidity inside, formed by long time stop. In the other way, overhaul inspection is not necessarily frequent.
 - (2) For continuously run motor such as pump and fan, frequently overhaul inspection is recommended.
 - (3) Record the result of daily inspection, monthly inspection and overhaul inspection for future reference and maintenance schedule planning.
 - (4) Schedule overhaul inspection by the condition of use. (see **Table 1**)

INSTALLATION SITE	INFREQUENTLY USED	CONTINUOUSLY USED
Dusty environment	Every 1-2 years	Yearly
Clean environment	Every 2-3 years	Every 1-3 years

 $\label{eq:table 1: Duration of overhaul inspection depend on working condition$

6.2 DAILY INSPECTION

- (1) Sound listen to motor part with sound rod for abnormal noise.
- (2) Smell Inspect that there is burning smell from overload or heat by ventilation obstruction or not.
- (3) External Check to find that there is obstructed matter in ventilation or any other abnormality occurred to motor external or not.

6.3 MONTHLY INSPECTION

- (1) Measure insulation resistance with megaohm tester to reach more than $1M\Omega$ by compare each connector (wire or terminal) with ground.
- (2) Repair the pealed paint area to prevent motor from rust.
- (3) For model that use open type bearing (no ZZ in bearing code such as 6318), Check grease condition and quantity. If there is decay or lack occurred, replace or fill by follow to that specifed in grease nameplate.

9

7.2 DISASSEMBLY & RE-ASSEMBLY PROTECTION PARTS IP55 (OUTDOOR)

- (1) END COVER
 - (1.1) WEARING TYPE (Without Fastened Screw)
 - Disassembly : Insert slotted screwdriver on End Cover back to pull out of Bracket. Do not make End Cover deform. Re-assembly : Add sealing gule at assemble area and then closely wear End Cover to Bracket by leave drain hole on bottom side (refer to groove and convex)



Wearing Type End Cover

Figure 6: Wearing Type End Cover

(1.2) SCREW FASTENING TYPE

Disassembly : Loosen fastened screw to remove End Cover out Re-assembly : Fasten End Cover screw with Bracket (no drain hole on End Cover)

Drain hole position



Figure 7: Screw Fastening Type End Cover

6.4 Inspection and cleaning while overhaul inspection.

- (1) Clean the bearing and housing.
- (2) Make sure that hemp yarn is still tight. Clean the coil in case that there is dust or dirt.
- (3) Inspect to repair or replace damaged part. And also clean other dirty or stained parts.

7. RECOMMENDATION IN DISASSEMBLY & RE-ASSEMBLY

7.1 MOTOR PARTS





Disassembly : Fringer is rubber ring that is tightened on shaft, pull out in axial direction of shaft to remove.

Re-assembly : Fairly apply grease onto bracket surface. Wear Fringer onto shaft by face emboss side out of Bracket. Fringer wing will tend to bracket as shown. Align Fringer to specified gap. Make sure that Fringer wing is not be reversed by Bracket.



Figure 8: Fringer re-assembly & alignment

- (3) V-RING
 - Disassembly : V-ring is rubber ring that is tightened on shaft, pull out in axial direction of shaft to remove.
 - Re-assembly : Fairly apply grease onto bracket surface. Wear V-ring onto shaft by face thin side to Bracket and align to specified gap as shown.



Ød	Α
10~18	4.5 ± 0.6
20~38	6 ± 0.8
40~65	7 ± 1
	Unit : mm

Figure 9: V-ring re-assembly Table 2: V-ring alignment

WARNING: Wearing gap of Fringer or V-ring is should be as specified in

Table 2 . If not sure, please service center Tel.0-2906-337~8

7.3 BRACKET DISASSEMBLY & RE-ASSEMBLY

(1) BRACKET DISASSEMBLY

Loosen bracket fix screws, use rubber mallet to hammer bracket out from Frame.

In IP55 (Outdoor) model, water-proof adhesive can tighten Bracket, In this case, lightly hammer to screw lug in circular direction ((1)) to loosen (some model has screw lug only at the opposite side Bracket, so hammer these instead), then hammer Bracket out (2) carefully.









Figure 10: Bracket disassembly

WARNING: Do not forcefully hammer to bracket screw lug, doing so can cause damage to bracket.

WARNING: Do not hammer directly to shaft end to push opposite side bracket out. Doing so may lead to bearing damage.

13

7.5 BEARING DISASSEMBLY & RE-ASSEMBLY

(1) DISASSEMBLY FROM SHAFT

Support bearing inner ring with supporting plate, then press the shaft end carefully. In case of use bearing puller, place the puller arm under bearing inner ring and screw puller bolt to push the shaft out.





with bearing puller

Figure 12: Bearing pull out method with press machine and bearing puller

(2) RE-ASSEMBLY BEARING ONTO SHAFT

with press machine

Apply lubrication onto wearing area of shaft and bearing, then place pipe or equipment on bearing inner ring and carefully push with press machine.



Figure 13: Re-assembly the bearing with press machine

WARNING: Disassembling motor part requires high carefulness. If not sure to do, please contact service center Tel. 0-2906-3337~8

15

(2) BRACKET RE-ASSEMBLY

Before re-assembly the bracket, insert bearing attached rotor into Stator center hole. Be careful to not let rotor to be scratched.

Assemble Bracket side by side by put bearing into bearing housing on Bracket and hammer Bracket with rubber mallet into Frame and then fasten with screws.

For IP55 (Outdoor) model, remove out stained adhesive at the rim of Frame and Bracket and then apply THREE BOND 1194 adhesive onto Frame end thoroughly. So assemble Bracket by leave drain hole on the bottom side as shown. (For some model that have to insert fastening screw through Frame inside, apply adhesive around screw hole of Bracket also)

> Protrusive part of Bracket



Figure 11: Bracket re-assembly for IP55 model

7.4 CAPACITOR COVER DISASSEMBLY&RE-ASSEMBLY(Available in some model)

- (1) Disassembly by release screw ,and pull up the cover to upper direction
- (2) Re-assembly by push down the cover on last position ,and tighten screw For model IP55 (Outdoor) must cleansing old gule before spread rubber gule at capacitor cover on assembly area with gasket ,and then apply sealing gule into tap holes before tighten screw for assembly the cover



WARNING: For disassembly of Capacitor Cover ,motor maybe lose perfomance of water and dust protection(For IP55) and damage. If not sure to do, please contact service center Tel. 0-2906-3337~8 14

8. TROUBLE SHOOTING

FAULT	POSSIBLE CAUSE	CORRECTION
Motor fails	1. No electric power	1. Check electric power.
to start.	2. Fuse broke electric circuit.	2. Change fuse.
	3. Cable is cut/broken.	3. Change cable.
	4. Poor electric connection.	4. Clean/tighten connection.
	5. Voltage drops.	5. Check power source/use proper
		extended cable.
Motor has	1. Lack of some phase power	1. Check switch and control circuit.
abnormally	(for 3 phase motor)	
loud noise.	2. Abnormal power source	2. Correct the power source.
	3. Overload.	3. Select more appropriate motor power.
	4. Bearing is defective.	4. Change bearing.
	5. Bearing grease is lack or	5. Fill or change bearing grease.
	decayed (open type bearing)	
Motor is slow	1. Starter system is faulty.	1. Check and replace starter.
in speed.	2. Power source is abnormal.	2. Inspect to correct power source.
	3. Overload.	3. Select more appropriate motor power.
Abnormally	1. Unbalance in attached	1. Inspect to calibrate balance in
high in	machine part is too high.	attached machine part.
vibration.	2. Coupling is out of alignment.	2. Correct the coupling alignment (also
		consider to heat-affected extension).
	3. Motor base is not stable or	3. Reignforce motor base/tighten all
	fasten bolt is loosed.	fasten bolt.

Table 3: Trouble and basic correction

The manufacturer reserves the right to change details of

performance, specification, design or any others without notice.